

UPDATE

BBT MAIN DEVICE / Bb RADIO / Bb SPEAKER

BBT ADVANCE / BBT STANDARD / BBT MASTER

 
STEP 1.

Disable your PC's bluetooth.



Download UPDATE WIZARD and install on your PC.


FILE NAME : BbTALKIN DfuWizardSetup v.1.4




All Firmware of BbTALKIN series is compatible with Win 7, 8, 10.

STEP 2.

 Open the UPDATE WIZARD and connect PC and BbTALKIN device with micro USB cable.

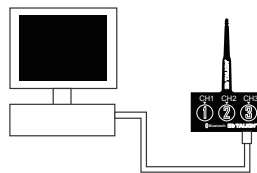

 Press & Hold 5 sec. volume button (+/-) at the same time until LED flashes red & blue.

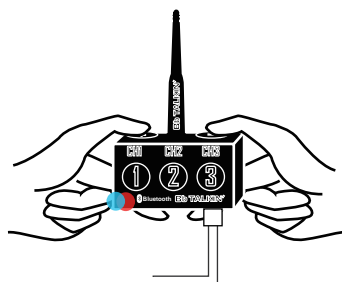

STEP 3.



Download firmware and install on your PC.

Download FW(firmware), unzip file and save on desktop.

For **MASTER** unit BM v1.021

For **STANDARD** unit BBT v1.026

For **ADVANCE** unit BA 10

!! WARNING!!

DO NOT install **MASTER** firmware to **STANDARD** or **ADVANCE** device.

 
DO NOT install **STANDARD** firmware to **MASTER** or **ADVANCE** device.

DO NOT install **ADVANCE** firmware to **MASTER** or **STANDARD** device.

STEP 4.

Start to update.

Do not plug out the USB cable while updating.

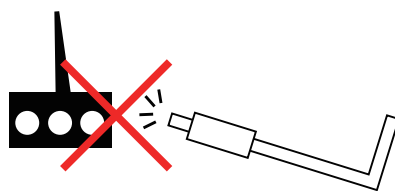

It may take few minutes to update.

LOADING...

STEP 5.

Press FINISH when update is completed.



Bb RADIO

 
STEP 1.

Disable your PC's bluetooth.



Download UPDATE WIZARD and install on your PC.


FILE NAME : BbTALKIN DfuWizardSetup v.1.4




All Firmware of BbTALKIN series is compatible with Win 7, 8, 10.

STEP 2.

 Open the UPDATE WIZARD and connect PC and bb radio with USB-3.5mm charge cable which comes with.

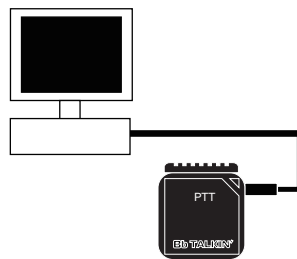

 Press & Hold 5 sec. volume button (+/-) at the same time until LED flashes red & blue.

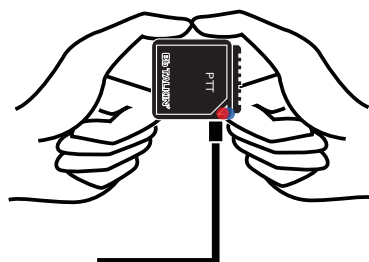

STEP 3.

 
Download FW(firmware), unzip file and save on desktop.
For bb radio, the latest firmware is BR v1.2.



STEP 4.

Start to update.

Do not plug out the USB-3.5mm charge cable while updating.

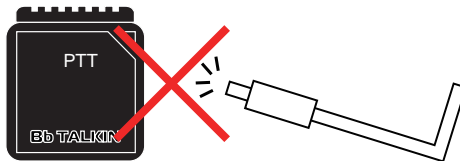

It may take few minutes to update.

LOADING...

STEP 5.

Press FINISH when update is completed.



Bb SPEAKER

 
STEP 1.

Disable your PC's bluetooth.



Download UPDATE WIZARD and install on your PC.


FILE NAME : BbTALKIN DfuWizardSetup v.1.4




All Firmware of BbTALKIN series is compatible with Win 7, 8, 10.

STEP 2.

 Open the UPDATE WIZARD and connect PC and Bb SPEAKER with micro USB cable.

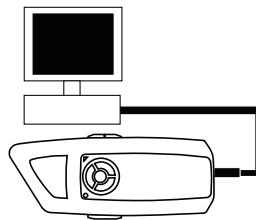

 Press & Hold 5 sec. CH1 &CH2 button at same time while power is OFF until LED flashes red & blue.

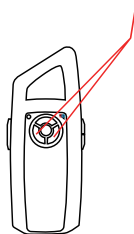

STEP 3.

Download FW(firmware), unzip file and save on desktop.


For Bb SPEAKER, the latest firmware is BS v1.1.



STEP 4.

Start to update.

Do not plug out the USB cable while updating.

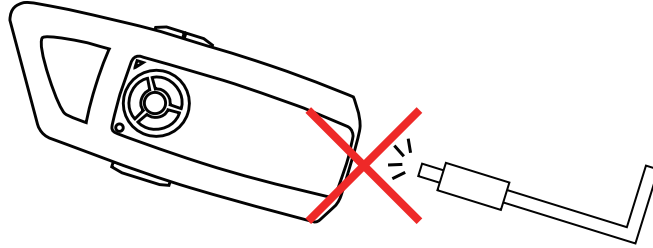

It may take few minutes to update.

LOADING...

STEP 5.

Press FINISH when update is completed.

